



1912 BLACKBURN MONOPLANE

By SID MILLER . . . This model was designed and flown as a free flight, but if you're an R/Cer who is willing to do a little modifying, the plans provide a nice basis for producing a lightweight 3-channel scale ship.

• Those aviation enthusiasts who were lucky enough to visit the last open day of the season at Old Warden Airfield (England), would have witnessed the rare sight of a genuine 1912 aeroplane in its natural element.

Piloted by Neil Williams, the Shuttleworth Trust's (Museum) Blackburn Monoplane gave a spirited performance despite its vintage years and there were few spectators left uninspired by the occasion.

Robert Blackburn, the designer, was born in 1885 and was a qualified civil engineer. He became interested in aviation at the time of Wilbur Wright's visit to France in 1908.

The 1912 Monoplane was the third in a series of designs which extended into a long and fruitful career by Blackburn, of building aeroplanes for the Royal Navy.

The following is a description of the construction of the real aeroplane.

which along with the photos of the real aeroplane, should facilitate scale construction and details.


The construction of the airframe is fairly typical of the period. The fuselage is made from three ash longerons, with spruce spacers, the rear turtledeck is faired to a semi-circular section by 11 stringers. Thin aluminum sheet extends to the rear of the cockpit, and this has a dull finish. The wings have no ailerons but are 'warped', and contain two spindled ash spars, with built-up cottonwood ribs.

The tail assembly has single surface covering and both movable and fixed surfaces are attached to separate 1-inch diameter spars of steel tube. The undercarriage (landing-gear), clean for its period, is made of ash, streamlined between joints, with two spreader bars of steel tube.

The pilot has two basic instruments at his disposal, a large revolution counter




Author/designer Sid Miller with his 1912 Blackburn Monoplane.

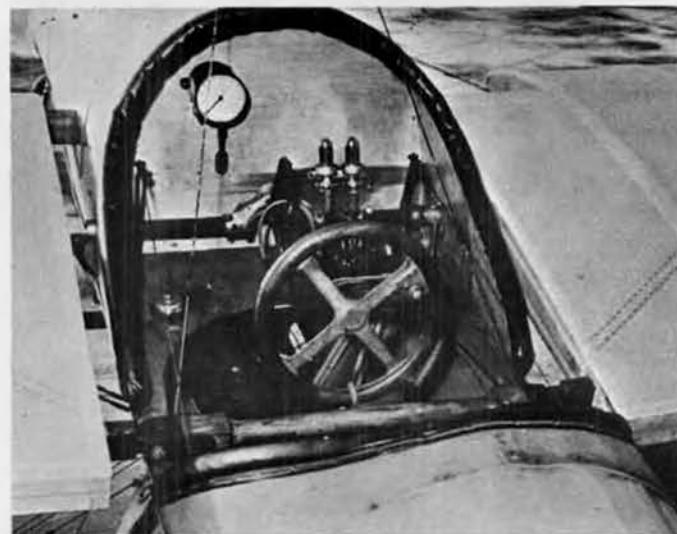

Close-up of cockpit in Shuttleworth (England) Museum Blackburn. Instrumentation totalled one tachometer and two oil pulsator glasses.



Cockpit of model closely resembles real cockpit at left. All museum photos by Bob Meuser.

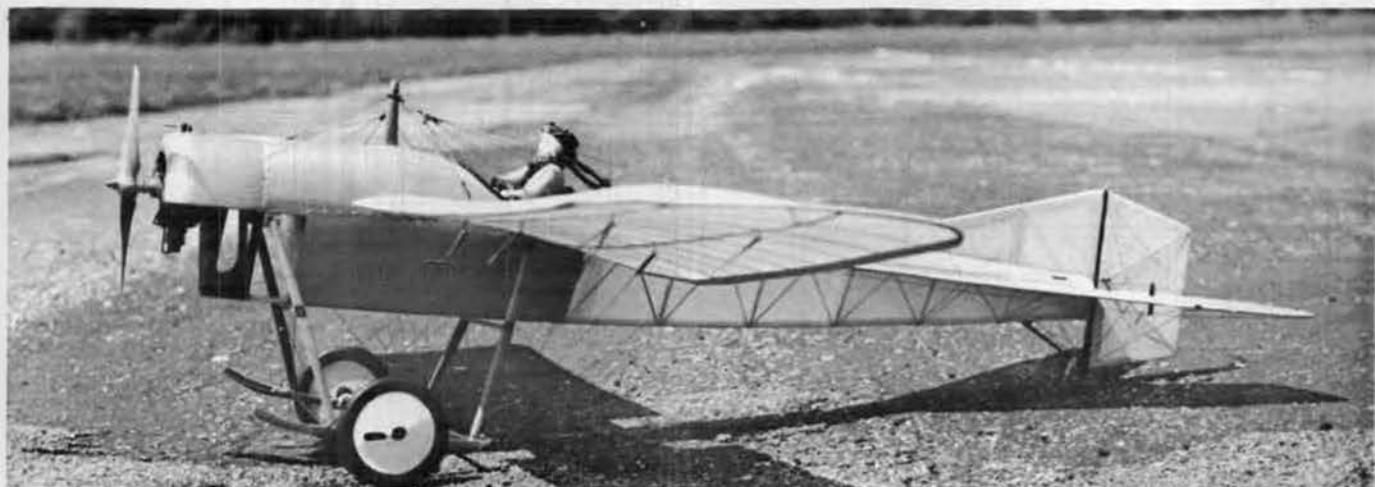

(tachometer) mounted at the left, and a couple of oil pulsulator glasses. The flying controls consist of a fairly standard rudder bar and a long 'joystick' on which is mounted a 12-inch diameter steering wheel'. This wheel warps the trailing edge of both wings by pulling on two cables which run from the fuselage sides down to pulleys attached to the rear legs of the undercarriage. Each cable at this point divides into three, which run to the rear spars. Corresponding cables from the top surface of the spars run up and over the ash kingpost and perform the duty of the balance cable on modern

ailers. At the time the Blackburn was built, ailerons were virtually unknown.

Standard lifting (flying) and landing wires brace the front spars.

The real aircraft is covered in the normal off-white linen, which darkens with age.

The model, although primarily designed for free flight, is easily adaptable for radio control. The large wing area, deep undercamber, and adequate tail surfaces, should handle a larger motor (10 to 15 c.i.) and the extra weight of radio gear, with ease. I would like to offer two suggestions along those lines: use of wire and tube wing mounting (as per RC sailplanes), and cables for servo to rudder and elevator hook ups.

CONSTRUCTION

WINGS


Use pattern on plan to make templates for ribs W-1 and W-2. Cut and sand ribs as per number on plan. Make a thick cardboard template of the wing tip shape. Soak strips of 1/32 x 1/8 balsa, bass, or spruce, and laminate four thicknesses around template. Notch trailing edge to receive ribs. Pin leading and trailing edges over plan and glue ribs in place. Slide 1/4 x 1/8 spars (spruce recommended for RC) under ribs, carefully raise and glue in slots. Use scrap to block up spars, to allow for undercamber.

FUSELAGE

The basic crutch of 3/16 x 1/8 balsa is built directly over the plan top view and using the 'V' formers F-1, F-4, F-6, F-12, F-16, and 1/8 square spacers, add the bottom longeron. Remove the crutch from the board when dry and add upper

formers, stringers, motor mount, and cowling. Cut the cowling and mount to suit engine used. From experience, two degrees right thrust and three degrees down thrust is desirable.


The kingpost is a vital part of the construction of this type of model, since the landing wires (top) and flying wires (bottom) actually support the wings. It is a laminate of 1/32 plywood (1/16 for RC), between two pieces of hard 1/8 balsa.

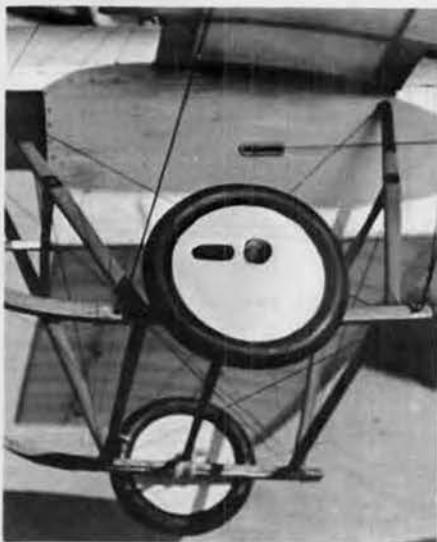

To keep weight down, Sid built his wheels of ply and balsa.



A detailer's dream, this photo reveals a myriad of wires, cooling fins, etc.

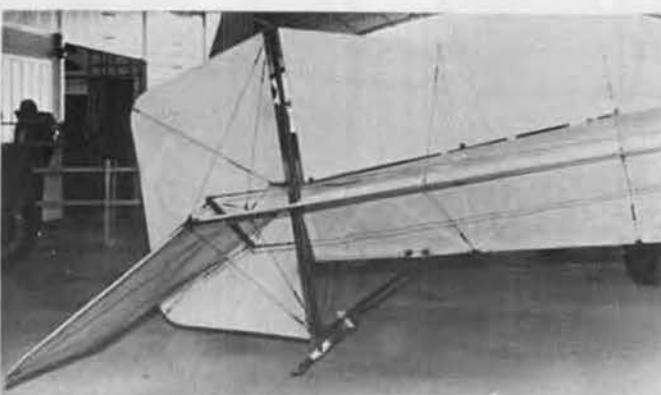

Here again, we can compare the real airplane with the model. What appears to be wide tail structure is really the reinforcing pinned tape over very thin structural members.





Wing flying and landing wires on model are functional. Original aircraft used wing warping instead of ailerons.

(spruce for RC) and securely glued in place. Note that it goes all the way to the bottom of the fuselage and is also glued to former F-5. Sheet forward part of fuselage as shown, later cut out cockpit opening and use split black rubber tubing to make cockpit coaming.

Add sternpost and skid. Fin can be glued on now or later after covering. If added later, be sure and remove paper along stringer where fin fits, for a good glue joint. Separate rudder is later hinged to the fin.

TAIL ASSEMBLY

Build both halves flat on plans; for free flight, elevators can be left as individual sections, joined to stabilizer halves by aluminum hinges, and for R.C., elevators should be joined by a dowel.

LANDING GEAR

Assemble as shown in full size on plan. Wrap with soft wire and solder all joints. Fair in with balsa and bamboo as indicated; spruce can be substituted and is desirable for R.C.


The wheels can be constructed as shown on the plan or Williams Bros 3-1/4 inch Vintage Type will do nicely. Assemble wheels on axle and secure axle in place with white, round, elastic thread available in sewing section of local stores . . . it is also used on tailskid . . . and acts as a shock absorber. The landing gear is spread at the open ends to fit into the brass tubing mounts, and cross braces fit into the wire eyelets.

RIGGING

The wings should be fitted on the



Close-up of engine installation on model, also cowl riveting. Original model used .06 diesel.

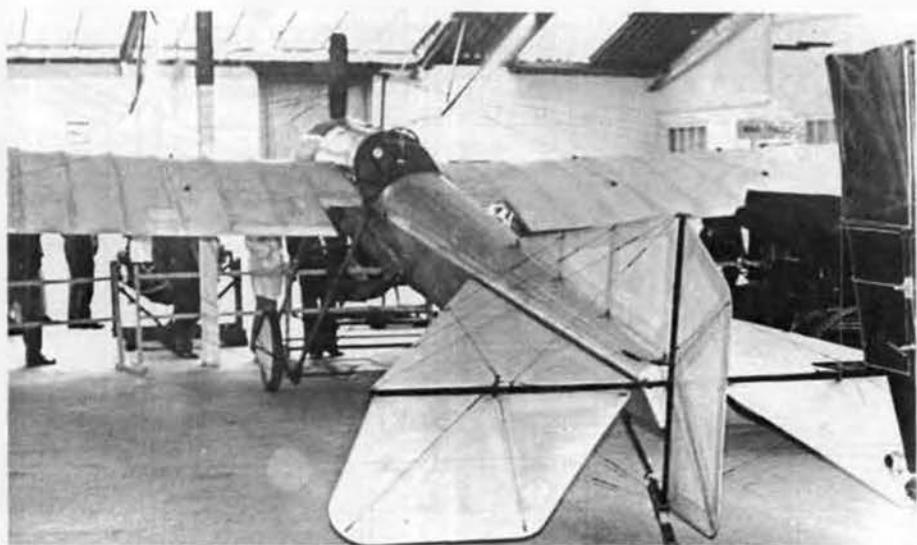


Another view of tail structure and sprung skid. Tail is well braced with wires. Triangular fuselage shape shown clearly from this angle.

plywood tongues and then, with the tail blocked up to set the fuselage centerline parallel to the working surface, block up the wing to 10 inches from the leading edge of the tip rib to the working surface. Rig flying wires (lower) of 30 lb. test black nylon fishing line, pulled tight, secured, and trimmed. The landing wires (upper) are constructed of Proctor flying wire, swages, and turnbuckles. The wires are fitted and then pulled taught using the turnbuckles. The turnbuckles are then secured with safety wires. This ten-

sion is important to provide a rigid and secure system, as the wing is supported by this series of flying and landing wires.

There are seven (7) lower braided lines on each wing panel; three from front of the landing gear lower surface to front spar wire attachment hooks; three from the rear landing gear attachment point to the rear spar. The seventh goes from the rear landing gear point to the front spar outermost hook. It is important that there be no upward give in the wings.

Continued on page 69

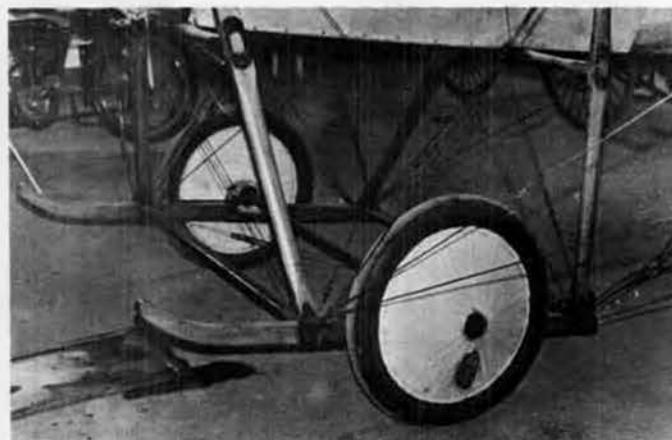

Close-up of landing gear on original and model shows that Sid may have added a few less wires, but the character of the design is very close.



Blackburn....Continued from page 60

when the model is held at the center of each wing

COVERING & FINISHING

I used white heavy duty silkspan on the fuselage, light weight white silkspan on the wings and tail. The stab and elevator are covered on the top surface only. The whole model should be given at least two coats of clear dope. Thinned (50/50) dope should be used on the wings and tail, with care taken to avoid warps.

The sheeted front should be painted dull silver, and the cowling interior flat black.

FLYING

1 Like any other model, the key to success is to make sure the model balances at the point indicated on the side view. The original did not require any added ballast. If necessary, add clay to nose or tail to achieve position shown.

2 R.O.G. your model, using full power with about a 15-second run. If not airborne after a 30-ft run, gradually decrease downthrust.

3. It is desirable that the model fly left-left if possible, but go with what seems right for your particular model.



4. If climb is too steep, increase downthrust. Glide can be fine trimmed with the elevator. Use rudder sparingly and only as a last resort.

The model is extremely graceful in flight, moving at scale speed, and looking very realistic due to its good size.

Good luck, fair skies, and gentle breezes.


A ← B ←

C ←

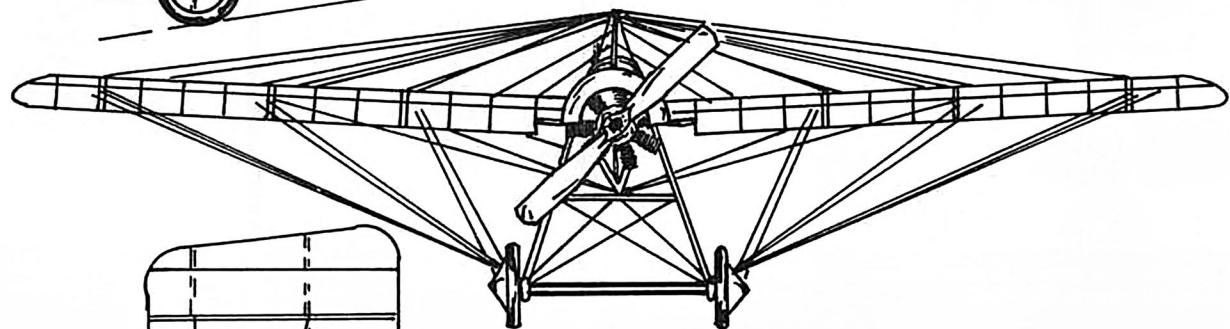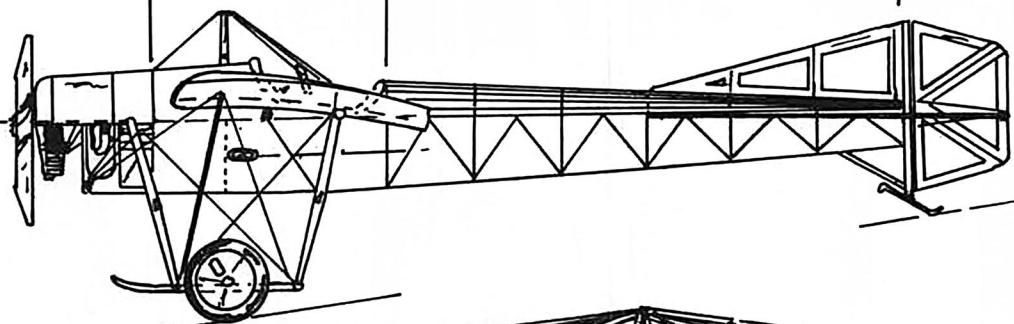

D ←

AL. STONE

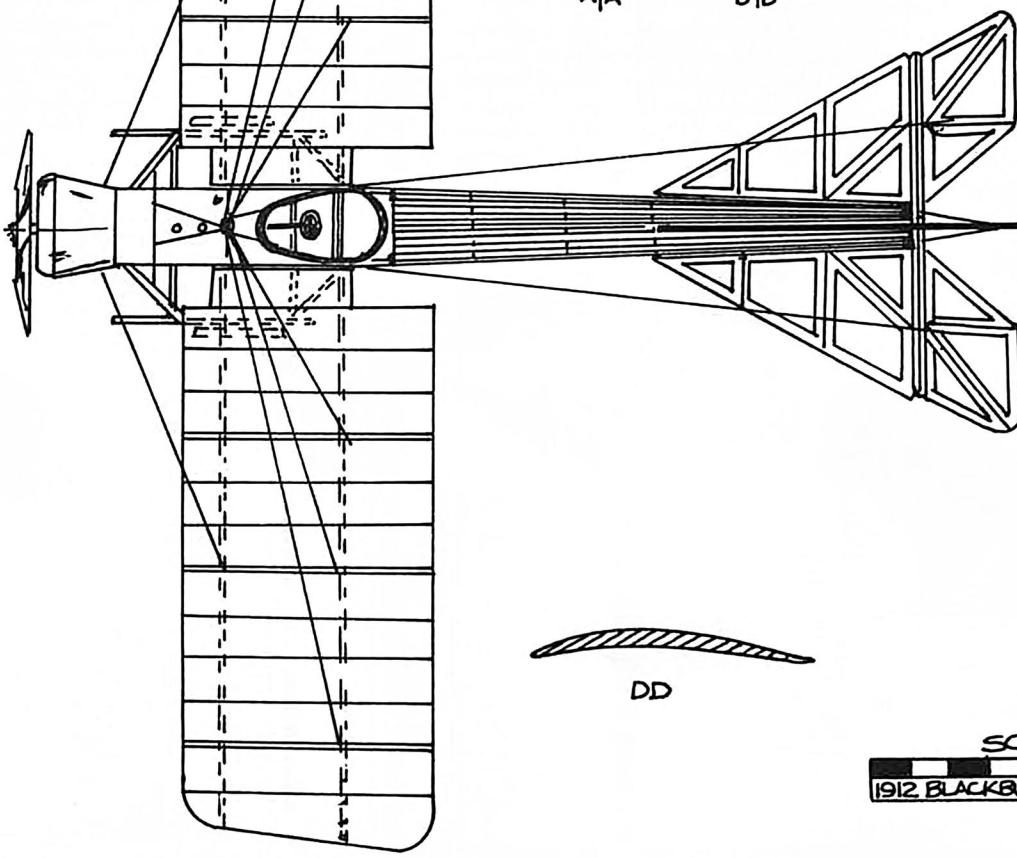

DD

SCALE

1912 BLACKBURN MONOPLANE FT.